



# U.S. BASED SUPPORT

**HOURS: MONDAY - FRIDAY | 8AM - 5PM EST**



[1.410.840.3555](tel:14108403555)



[support@iagperformance.com](mailto:support@iagperformance.com)



**VIDEO INSTRUCTIONS**

<https://iagperformance.com/vi/IAG-ACC-2602-OPT>





## ***IAG VB Fender Shrouds For 2022+ WRX***

### **IAG Fender Shrouds for 2022+ WRX**

**Part Number: IAG-ACC-2602**

**Congratulations on the purchase of your Fender Shrouds, and thank you for choosing IAG Performance! These instructions are intended for users with basic mechanical skills. Professional installation is not required.**

#### **Product includes:**

**1** (X2) Fender Shroud


**2** (X4) Color Plates

**3** (X4) Spacers

**4** (X4) Rubber Rivet-Nut

**5** (X8) 2.5mm Allen Bolt (Short)


**6** (X4) 2.5mm Allen Bolt (Long)

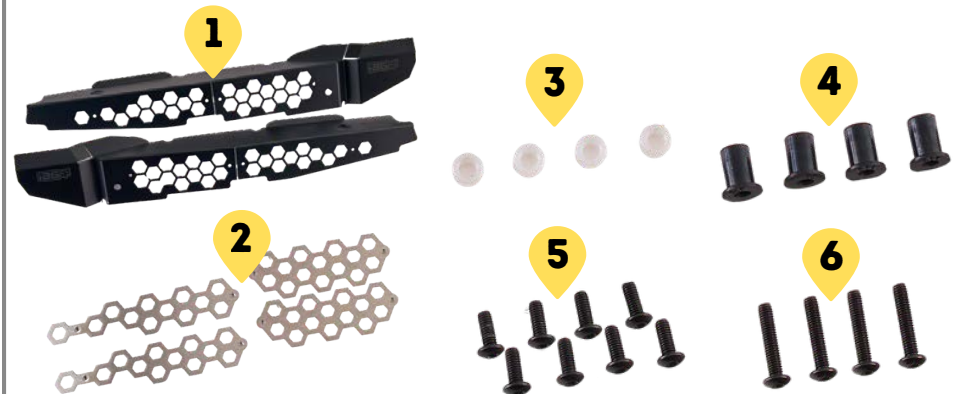

#### **Tools Needed:**

2.5mm Allen Wrench  
12mm Socket/Wrench  
Pocket Screwdriver  
Hood Prop Rod




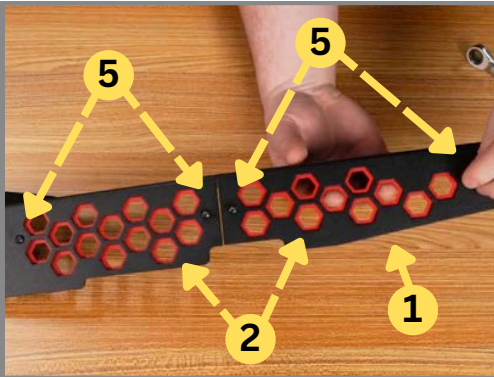


**Step 1:** Install the Color Plates to the Fender Shroud using four Short 2.5mm Allen Bolts.



**Step 2:** Install Long 2.5mm Allen Bolt through the top of the Fender Shroud. Place Spacer on opposing side of Bolt.

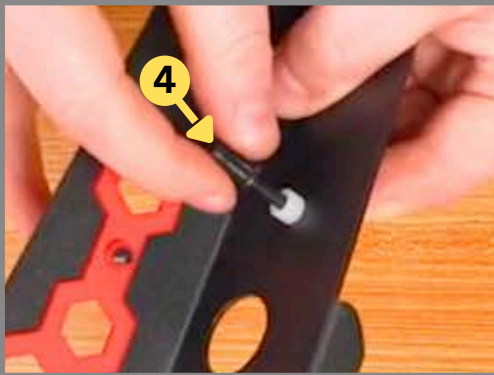

**Step 3:** Install Rivet-nut onto Allen Bolt. Thread on by hand but do not tighten. Repeat for both top bolts.

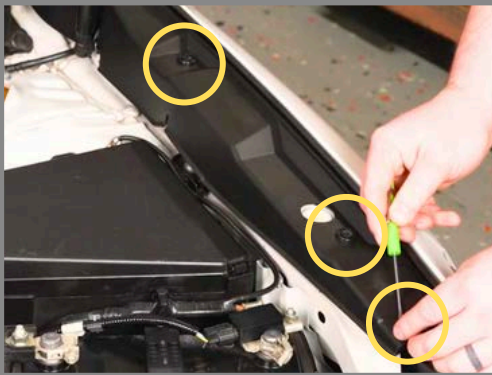


**Step 4:** Using a pocket Screw Driver, remove the three Push Clips from the factory Fender Shroud.




**Step 5:** Remove the Hood Strut from the bottom Ball Stud using a Screwdriver.  
**NOTE: Support Hood using Prop Rod**



**Step 6:** Using a 12mm Socket, remove the Ball Stud from the Fender.

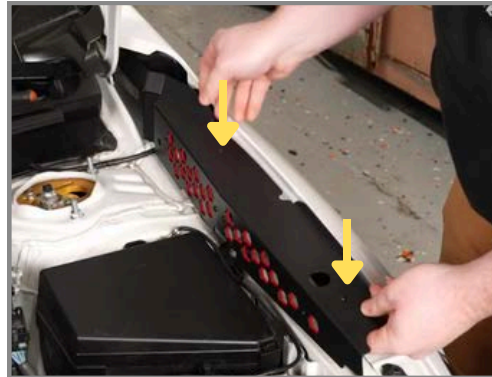

**Step 7:** Install the IAG Fender Shroud onto the Fender. Align the Rivet-nuts with the existing Push Clip holes.

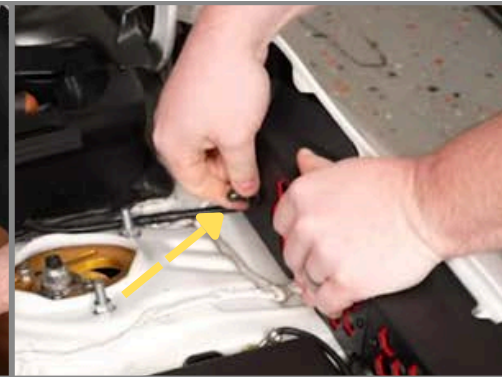

**Step 8:** Reinstall the Ball Stud, do not tighten at this time. Ensure that the Washer Fluid Hose is routed in the notch.



**Step 9:** Tighten the top Allen Bolts. Apply pressure to top of the Shroud to prevent the Riv-Nuts from spinning.



**Step 10:** Tighten the Ball Stud, then reinstall the Hood Strut. Repeat for other side.



If you have any questions about the installation or product please contact [support@iagperformance.com](mailto:support@iagperformance.com) or call 410-840-3555